


Christa McAuliffe Elementary

December 2011

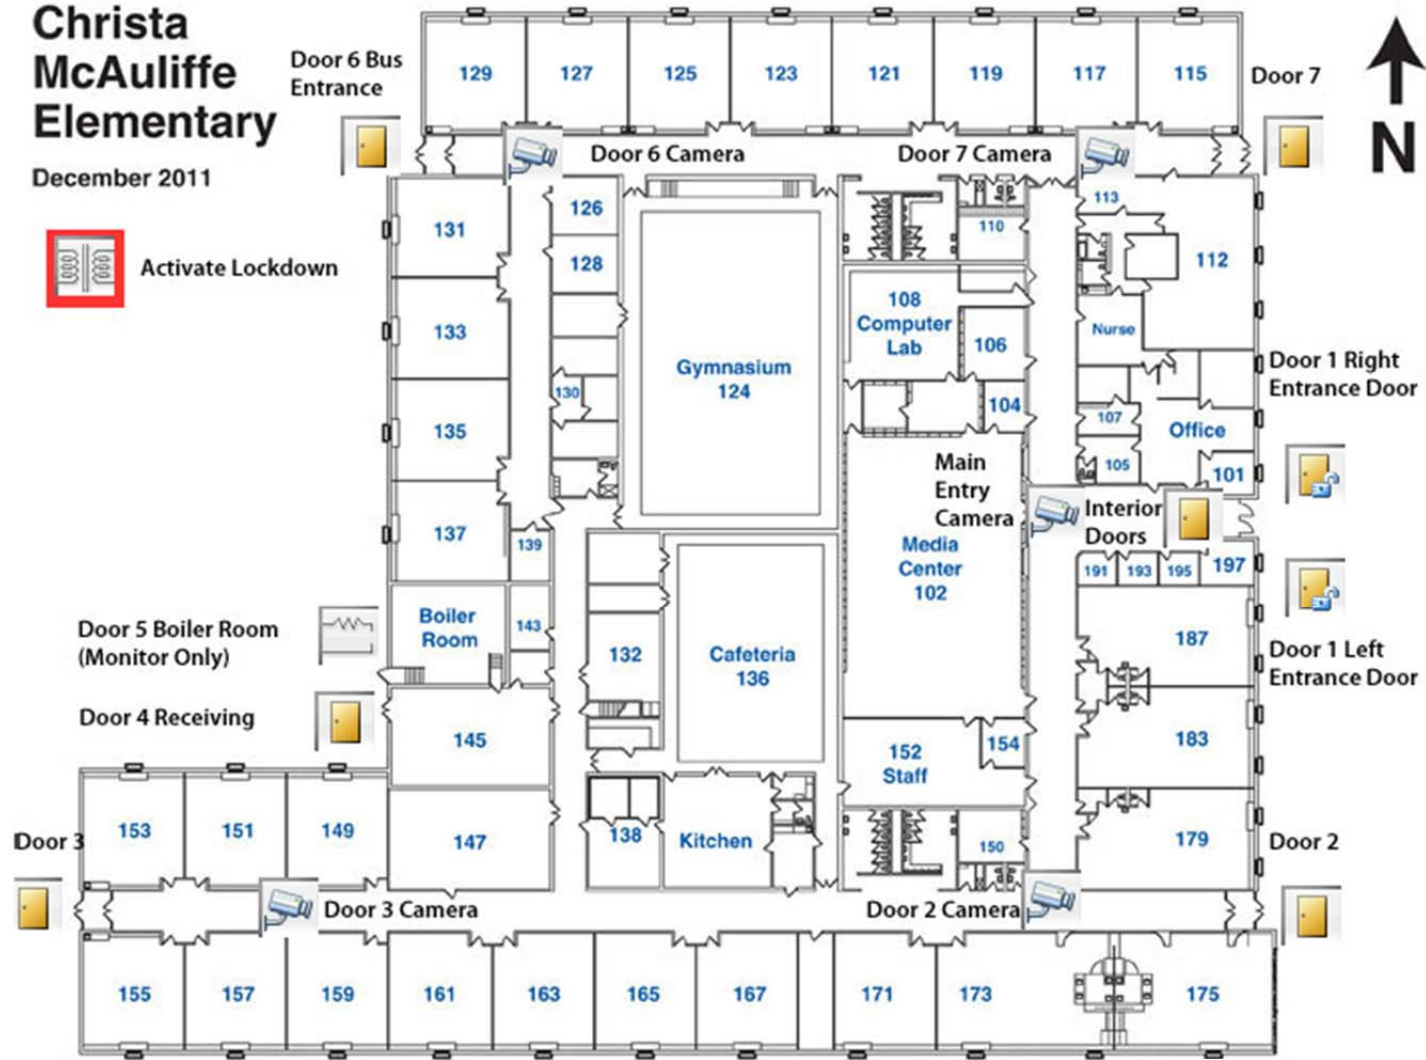

Activate Lockdown



Key:



= **Card Reader Entrance**
This icon represents a door with a Card Access Reader. Entry can be made by Access Card or by a programmed unlock.



= **Emergency Exit Only**

- Door cannot be accessed from interior or exterior – an alarm will sound if the door is opened at any time.
- It can be disarmed for propping if necessary.

(DC & REX)



= **Exit Only Door**
Doors with this notation do not have an Access Card Reader located on the exterior. The door will allow you to exit without the building without an alarm but not enter from the outside.